

JXCT[®]



JXBS-3001-EC-RS

3in1 Soil EC Temperature Humidity Sensor

User Manual

RS485 Modbus

Version: 2.0

Date: 2020-10-24

Status: Released

www.jxct-iot.com

I. BRIEF INTRODUCTION

1.1 Product Overview

The soil EC moisture temperature triple sensor is suitable for soil temperature and moisture measurements and total soil salt (electrical conductivity). The three-in-one sensor of the soil creatively measures salinity, moisture, and temperature, which greatly facilitates the evaluation of soil conditions by the customer's system. .

Compared with the German original high-precision sensor and the actual soil drying and weighing method calibration, high precision, fast response, stable output. Less affected by soil salt content, suitable for all kinds of soil. Can be buried in soil for a long time, resistant to long-term electrolysis, corrosion resistance, vacuum potting, completely waterproof.

1.2 Measurement Specs and Hardware Parameters

Parameters	Content
Power supply	12-24V DC
Output signal	RS485
Temperature range	-40°C-80°C
Temperature accuracy	±0.5°C
Temperature resolution	0.1°C
Water measurement range	0-100%
Moisture accuracy	±3% Within 0-53%; ±5% within 53-100%
Water resolution	0.10%
Electrical conductivity measurement range	0-10000us/cm
Conductivity resolution	10us/cm
Storage environment	-20°C-60°C
Working Pressure Range	0.9-1.1atm
Response Time	<1s
Protection Level	IP68

1.3 System Frame Diagram

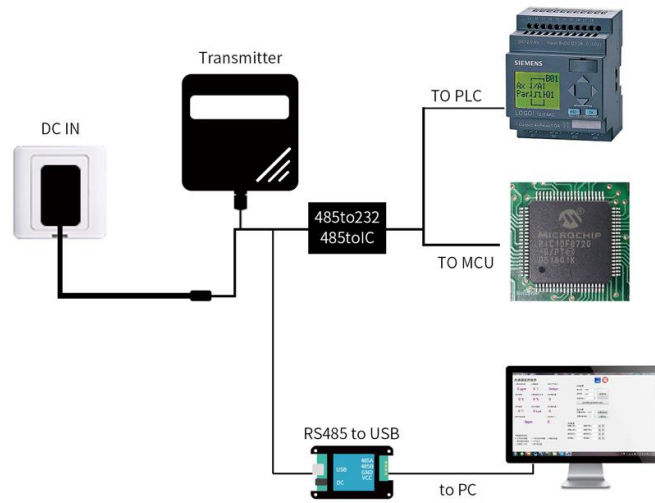


FIGURE 1 SINGLE-ENDED

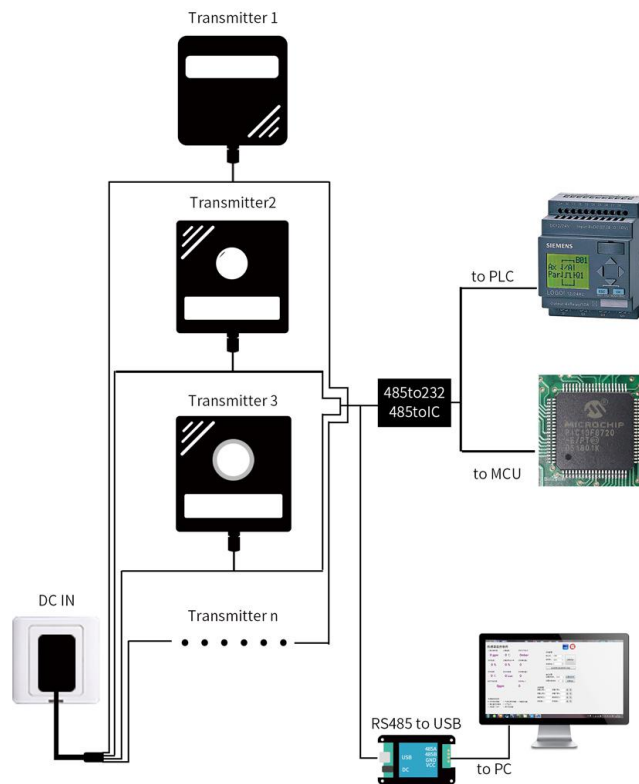


FIGURE 2 MUTIPLE-ENDED

II. HARDWARE CONNECTIONS

2.1 CHECKING BEFORE INSTALLATION

Check the list of devices before installation:

TABLE 1 List of Devices

Name	Number
THE SENSOR DEVICE	1
12V POWER ADAPTER (Optional)	1
WARRANTY CARD / CERTIFICATE	1
THE USBTO 485 DEVICE (Optional)	1

2.2 Interface Description

Before you wiring and use, please read this article in detail, Improper use may result in irreversible damage to the product.



Function	Cable Color	Specs
Power	Brown	Power supply +
	Black	Power supply -
Communication	Yellow (grey)	485-A
	Blue	485-B

We provide default cable length of 1.5 meters, you can extend the cable yourself according to your needs.

2.3 Speed measurement method

Select a suitable measurement site, avoid the stones, ensure that the steel needle does not hit a hard object, throw the topsoil at the required depth of measurement, keep the underlying soil tight, grip the sensor vertically into the soil, insert It is not allowed to shake right and left. It is recommended to measure multiple times within a small range of a measurement point to obtain the average value.

2.4 Buried method

Dig a pit with a diameter of >20 cm vertically and insert the sensor steel needle horizontally into the pit wall at a given depth. After the pit is buried tightly and stable for a period of time, measurement and recording can be performed for days, months, or even longer.

2.5 Precautions

- 1, Steel needle must be fully inserted into the soil.
2. Avoid direct sunlight on the sensor and cause excessive temperature. Use caution in the field against lightning strikes.
- 3, Do not violently bend the steel needle, do not force pull the sensor leads, do not beat or violently hit the sensor.
- 4, The sensor protection grade IP68, the sensor can be soaked in water.
- 5, Due to the presence of radio frequency electromagnetic radiation in the air, it should not be in a state of power in the air for a long time.


III. CONFIGURATION TOOL INSTALLATION AND USE

We provide **CONFIGURATION TOOL** , which can be easily used to test our sensor device.

3.1 Sensor Access Computer

Transmitter can be connected to PC with the RS485 to USB adapter. You can check the COM port number through Device Manager (right click My Computer).

3.2 HOW TO USE CONFIGURATION TOOL

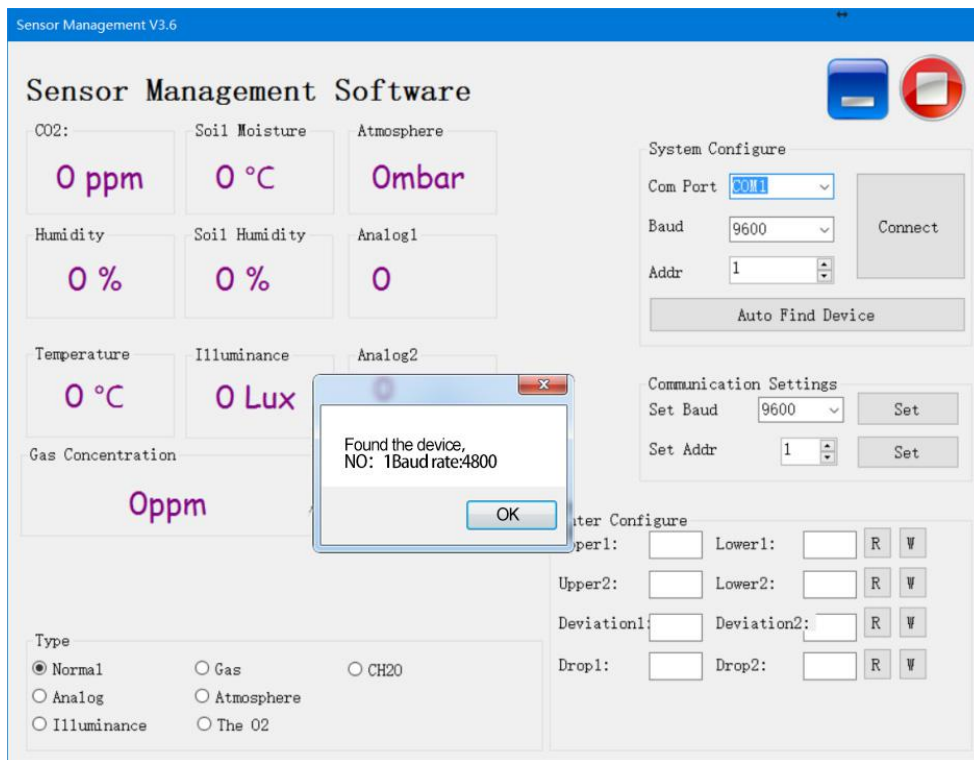

Please note that this software can only test one device at the same time. After connecting the physical device, click the **CONNECT** button to read the information. In the UNCONNECT state, you can modify BAUD and ADDR in COMMUNICATION SETTINGS.

Under the software, different check boxes can be selected according to different situations. For example, you can choose the GAS option to test the RS485 OXYGEN SENSOR , you can choose the NORMAL option to test the RS485 TEMPERATURE AND HUMIDITY SENSOR .

IV. COMMUNICATION PROTOCOL

4.1 Communication Basic Parameters

TABLE 3 Communication Basic Parameters

PARAMETERS	CONTENT
Protocol	Modbus RTU
Data bits	8 bit
Parity bit	No
Stop bit	1 bit
Error checking	CRC (redundant loop code)
Baud rate	2400 bps/ 4800 bps/ 9600 bps can be set factory defaults to 9600 bps

For more information about **MODBUS RTU** please visit the website"www.modbus.org".

4.2 Register Address

Register Address	Plc Configuration Address	Content	Operation
0002H	40003	Soil humidity(unit 0.1%RH)	Read-Only
0003H	40004	Soil temperature(unit 0.1°C)	Read-Only
0012H	40013	Soil humidity(unit 0.1%RH)	Read-Only
0013H	40014	Soil temperature(unit 0.1°C)	Read-Only
0014H	40015	Soil salt(unit 1mg/L)	Read-Only

0015H	40016	Soil conductivity(unit 1us/cm)	Read-Only
0100H	40101	Device Address (0-252)	R/W
0101H	40102	Baud Rate (2400/4800/9600)	R/W

TABLE 4 Register Address

4.3 Communication example

4.3.1 Read Device Address 0x01's Soil Temperature And Humidity

TABLE 5 Inquiry Frame

Address Code	Function Code	Start Address	Data Length	Check Code Low	Check Code High
0x01	0x03	0x00 0x02	0x00 0x02	0x65	0xCB

TABLE 6 Answer Frames

Address Code	Function Code	Number Of Valid Bytes	Humidity Value	Temperature Value	Check Code Low	Check Code High
0x01	0x03	0x04	0x02 0x92	0xFF 0x9B	0x5A	0x3D

Soil temperature:

FF9BH (hexadecimal) =-101=> temperature =-10.1°C

Soil humidity:

292H(hexadecimal) =658=>humidity =65.8%RH

4.3.2 Read Device Address 0x01's Soil Humidity Value

TABLE 7 Inquiry Frame

Address Code	Function Code	Start Address	Data Length	CRC_L	CRC_H
0x01	0x03	0x00,0x02	0x00,0x01	0X25	0xCA

TABLE 8 Answer Frame

Address Code	Function Code	Number Of Bytes	Humidity Value	CRC_L	CRC_H
0x01	0x03	0x02	0x00, 0x4A	0x39	0xB3

Soil humidity: 4AH(hexadecimal) =74=>humidity =7.4%RH

4.3.3 Read Device Address 0x01's Soil salinity

TABLE 9 Inquiry Frame

Address Code	Function Code	Start Address	Data Length	CRC_L	CRC_H
0x01	0x03	0x00, 0x14	0x00,0x01	0XC4	0x0E

TABLE 10 Answer Frame

Address Code	Function Code	Number Of Bytes	Salt	CRC_L	CRC_H
0x01	0x03	0x02	0x00,0x69	0x78	0x6A

Soil salt: 69H(hexadecimal) =105=>salt =105mg/L

4.3.4 Read Device Address 0x01's Soil Conductivity

TABLE 11 Inquiry Frame

Address Code	Function Code	Start Address	Data Length	CRC_L	CRC_H
0x01	0x03	0x00, 0x15	0x00, 0x01	0X95	0xCE

TABLE 12 Answer Frame

Address Code	Function Code	Number Of Bytes	Conductivity	CRC_L	CRC_H
0x01	0x03	0x02	0x05, 0xDC	0xBA	0x8D

Soil Conductivity: 5DCH(hexadecimal) =1500=>Conductivity =1500us/cm